



Torque Wrench Instructions

MAG SYSTEM LOCKING		MAG SYSTEM UNLOCKING	
	<p>Press the button 1 on the rear and insert the tip 2</p>		<p>Press the button 1 on the rear and insert the tip 2</p>
	<p>Move the stick to the right</p>		<p>Move the stick to the left</p>
	<p>Pull down the green spring ring and rotate the ring nut to the right until the torque value is set at 40 Nm</p>		<p>Pull down the green spring ring and rotate the ring nut to the right until the torque value is set at 40 Nm</p>
	<p>Insert the wrench into the MAG and tighten clockwise until you hear a "click" indicating that the set torque has been reached</p>		<p>Insert the wrench into the MAG and loosen counterclockwise for at least one full turn (do not exceed 1 1/2 turns)</p>
	<p>← 0Nm</p>	<p>IMPORTANT At the end of each operation, pull down the green ring and rotate the ring nut to the left until returning to the torque value of 0 Nm</p>	

It is recommended to check the torque wrench every 12 months or after 5000 work cycles